

GLOSS

GLOSS SOAP DISH

SPECIFICATIONS



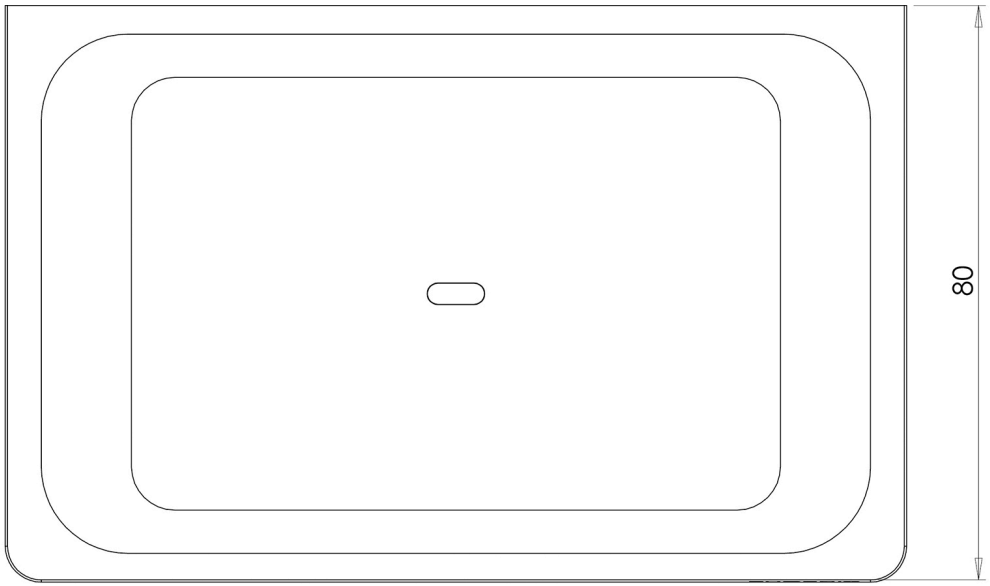

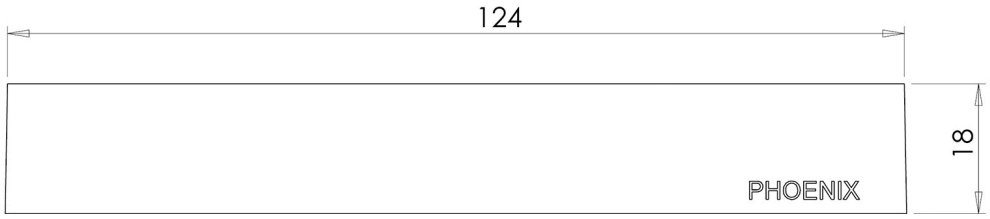

AVAILABLE IN



GS895
Chrome



GS895-40
Brushed Nickel



GS895-31
Brushed Carbon



GS895 MB
Matte Black



GS895-24
Brushed Bronze



GS895-12
Brushed Gold

INFORMATION





MAINTENANCE AND CARE:

- All surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface.
- Any damage caused in this way will not be covered by warranty.