1 SETTING CLOCK AND DAY

This timer is fitted with a real time clock. It is essential that the clock time and day are set accurately if you require your programmed events to start on time. To set follow the steps below:

1. Touch the time display and the time will start flashing. Use the (+) and (–) buttons to set the time. By holding the button down the time will change faster.
2. Press (>) to move to the Day setting and use the (+) and (–) buttons lo get to the correct day.
3. Press DONE to store and exit.

MENU FEATURE - Basic Menu

1.Clock Format

You can select the clock to show in either 12 or 24 hour time.

2. 5 + 2 / 7 Day Mode

This allows you to program either 5 days at once, then the 2 days of the weekend separately, or a full 7 days at the same time, or 7 days separately.
01 = 5+2 day programmable
02 = 7 day programmable

MENU FEATURE – Advanced Menu

In menu 02, press and hold top right corner of the screen for about 5 seconds, you will see menu 03. Press (>) to move to the next Menu.

3. Modes

00 = Manual Mode 01 = Auto Mode

4. Direction of Installation

P = Portrait L = Landscape

2 OPERATION

Auto Mode

This timer has the ability to programme each individual day of the week separately or programme 7 days of the week at once. You can also programme weekdays (5 days) to one schedule and then weekends (2 days) to a different schedule.

Sample schedule

PROGRAM	START TIME	SET POINT
01	WAKE 07.00	ON
Set to the time you would like to wake to and the temperature you want during the morning, until you leave for the day.		
02	LEAVE 09.30	OFF
Set to the time you leave home and the temperature you wish your home to maintain while you are away at work perhaps.		
03	RETURN 16.30	ON
Set to the time you return home at the end of the day and the temperature you want during evening until bed time.		
04	SLEEP 22.30	OFF
Set to the time you return home at the end of the day and the temperature you want during evening until bed time.		

To modify the schedule:

1. Press SCHEDULE and the day display will start flashing. Using the arrow to select the day you wish to programme. Then press (>) . (If your timer is set to 5+2 day programmable mode, the programming will skip to step 3.)
2. To select every day to follow the some program simply press All Days. Press (>).
3. The LCD screen will show scheduled programme 1 (PI). This is the first programme function of the day.
4. The default start time for the scheduled program is now flashing. Adjust the time programme 1 event it should commence. Then press (>).
5. The temp is now flashing. Set the temp that you want the floor to heat to during schedule programme 1 event.

3 AUTO/MANUAL MODE

Use mode button to switch between Auto/Manual Mode.

In Manual mode the timer maintains a constant set status manually set by the user. Touch ON or OFF on the screen and use + - to adjust.

In Auto mode the timer executes the pre-programmed schedules.


4 LOCK THE KEYPAD

To lock the keypad, press and hold the top left corner of the display for 5 seconds. You will see LOCKED on the screen. To unlock, repeat the steps above and the symbol will disappear.

5 RESET TO FACTORY SETTINGS

With thermostat turned off, press and hold (OFF) for 5 seconds until you see -:- on the LCD screen.

Product name: Timer
Model: TS8100W-TIM-US
Input: 230-240VAC 50Hz
Output:230-240VAC 16A

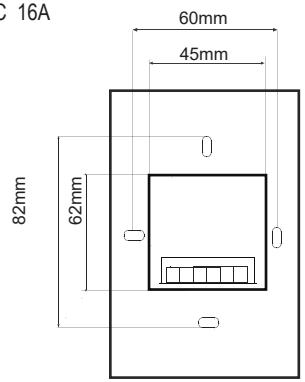


radiant AUSTRALIA

TS8100W-TIM-US



- ✔ Large colour touch screen
- ✔ 5+2 / 7 day schedules
- ✔ Vertical / horizontal models

WIRING DIAGRAM

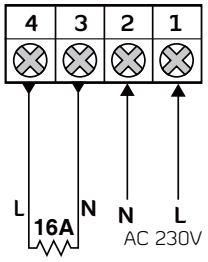

WARNING–Important safety instructions

Disconnect the power supply before carrying out any installation or maintenance work on this control unit and associated components. This control unit and associated components should only be installed by a competent person (i.e. a qualified electrician). Electrical installation must be in accordance with appropriate statutory regulations.

The button cell battery inside the product is fixed in place. Should replacement be necessary, it must be performed by a qualified technician.

Mounting of thermostat

Carefully separate the front half of the timer from the back plate by placing a small flat head terminal driver into the slots on the bottom face of the thermostat.

Carefully unplug the ribbon connector which is plugged into the front half of the thermostat.

Place the timer front half somewhere safe. Terminate the thermostat as per the above wiring diagram.

Screw the timer back plate on to the wall plate. Re-connect the thermostat ribbon cable and clip the two halves together.

To ensure the numerical display is correctly orientated during installation, the locating clip tabs must be positioned appropriately relative to the mounting orientation. For vertical mounting, ensure the locating clip / tabs are positioned at the base of the unit. For horizontal mounting, ensure the locating clip / tabs are positioned on the right-hand side when facing the front of the unit. Re-connect the timer cable and clip the two halves together.

Technical data

Product Name: Timer
Model: TS8100W-TIM-US

Supply voltage	230-240V AC 50Hz
Output	230-240VAC 16A resistive load
Clock function	4-event program
Air sensor temp. range	+5°C to +45°C
Air sensor calibration range	-5°C to +5°C
Floor sensor temp. range	+5°C to +45°C
Installation orientation	Portrait / Landscape
Floor sensor type	NTC (10K Ohms)
On/Off differential range	1°C to 10°C
Battery backup	1 x CR1220 3V
Screen backlight life	5,000 hours
Protective housing	IP20
Housing material	PC+ABS