POWER

Press ⏻ to turn on or off your timer.

SETUP

Press ⚙ Screen will display:

MODE
TIME & DATE
SCHEDULE
MENU

MODE

Press MODE button to enter the MODE selection.
Tick AUTO or MANUAL and then press ☑ button.
The main screen will display AUTO or ☝ accordingly.
In manual mode, to select ON or OFF, press △ or ▽.

TIME & DATE

Press TIME & DATE button first.

Touch the area you want to adjust,

Press △ or ▽ to adjust; Press ☑ to store.

SCHEDULE

Press SCHEDULE.
Press VIEW MY SCHEDULE to go over the schedule

Default Settings

	MONDAY - FRIDAY		SATURDAY - SUNDAY	
PROGRAM	START TIME	SETPOINT	START TIME	SETPOINT
P1	07.00	ON	07.00	ON
P2	09.30	OFF	09.30	OFF
P3	16.30	ON	16.30	ON
P4	22.30	OFF	22.30	OFF

Press EDIT MY SCHEDULE to change the schedule

First, select the day or days you want to program.
Press Weekdays to select Monday to Friday;
Press Weekends to select Saturday and Sunday;
Press Select All to select Monday to Sunday;
Press Next to edit the start time and ON / OFF status for each program.

MENU

Press MENU;
The following menu will be displayed.
Press next page or last page to switch among pages.
Press each menu to enter into the setting options.
Press ↩ to return to SETUP; Press ☑ to store the settings. Press ⌂ to return to the main screen.

1	Screen direction
2	Backlight brightness
3	Child lock
4	Clock format


5	Factory settings
6	Clean screen

INSTALLATION AND WIRING


Carefully separate the front half of the timer from the back plate by placing a small flat head terminal driver into the slots on the bottom face of the timer. Carefully unplug the cable connector which is plugged into the front half of the timer. Place the timer front half somewhere safe. Follow the wiring diagram to connect the appliance (i.e heated towel rail, or lights) and electrical supply to the appropriate terminals. Screw the thermostat back plate on to the flush box.

To ensure the numerical display is correctly orientated during installation, the locating clip tabs must be positioned appropriately relative to the mounting orientation. For vertical mounting, ensure the locating clip / tabs are positioned at the base of the unit. For horizontal mounting, ensure the locating clip / tabs are positioned on the right-hand side when facing the front of the unit. Re-connect the timer cable and clip the two halves together.

DIMENSIONS

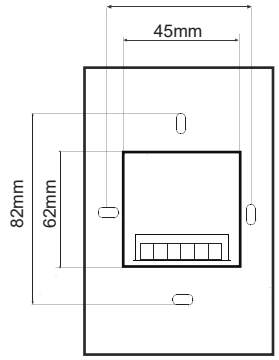

WIRING DIAGRAM

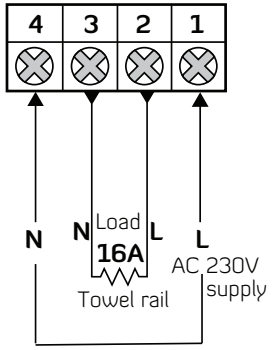

radiant AUSTRALIA

Programmable Timer
UTSW-TIM



- ✓ Large colour touch screen
- ✓ Simple programming
- ✓ 5+2 / 7 day schedules
- ✓ User-friendly menu
- ✓ Vertical / horizontal models
- ✓ Ultra slim profile